

1:28

Instruction manual

Stunt car

Thank you for purchasing one of our toy products. To ensure that you get the most out of your new purchase, please read these instructions carefully before using the toy for the first time. They contain important information on how to operate the product.

⚠ Caution :

▪ Electrical product

This product is not suitable for children aged 6 or under. When using electrical products, precautions must be taken to prevent the risk of an electric shock.

▪ Ensure adult supervision at all times



Warning: Do not attempt to modify or re-assemble this product. Unauthorized changes may void your right to use the product.

WARNING: For the purposes of recharging the battery, only use the detachable supply unit provided with this toy.

Charging the batteries

1. Insert the USB plug into an indoor USB power supply, and then connect the battery compartment to the charging cable.
2. A full charge takes 90 minutes. When charging the LED indicator turns into red, when charging is complete, the LED indicator stays off.
3. Regularly inspect the toy, battery charger, charging cable, connectors and other components for signs of damage. In the event of any damage, discontinue use and send the parts for repair.

Calibrating the vehicle

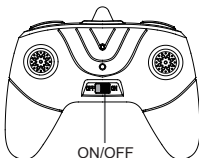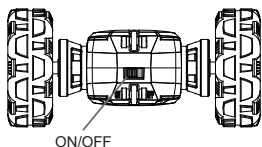


Instructions:


- Check that the ON/OFF switch is in the "ON" position. The vehicle will not respond to the remote control when the switch is in the "OFF" position.

Inserting the remote control batteries

1. Observe the polarity markings on the battery compartment to ensure that the batteries are inserted in the correct polarity.
2. Attach the cover to the battery compartment as shown in the diagram below.
3. Insert rechargeable batteries into the battery compartment.
4. Use a screwdriver to secure the battery compartment cover in place.

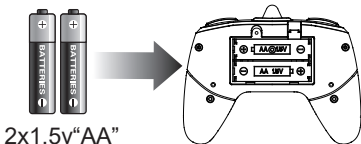


Inserting the battery compartment into the vehicle

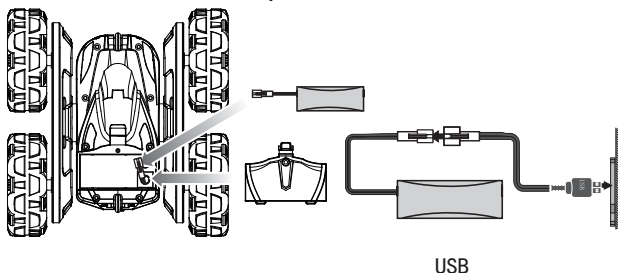


Basic controls

Fig. 1

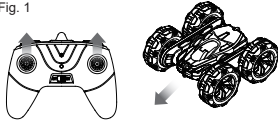


1. Push both throttle levers upwards to make the vehicle move forwards.

Fig. 2

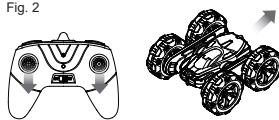


2. Pull both throttle levers downwards to make the vehicle move backwards.

Fig. 3

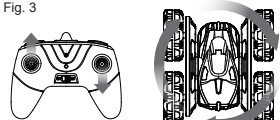


3. Push the left throttle lever upwards and pull the right throttle lever downwards to make the vehicle spin clockwise.

Fig. 4

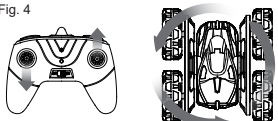


4. Pull the left throttle lever downwards and push the right throttle lever upwards to make the vehicle spin anticlockwise.

Fig. 5

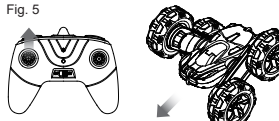

5. Push the left throttle lever upwards to flip the wheels and make the vehicle move forwards.

Fig. 6

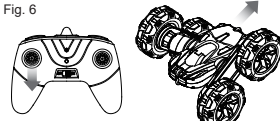

6. Pull the left throttle lever downwards to flip the wheels and make the vehicle move backwards.

Using the vehicle

1. Switch on the vehicle using the ON/OFF switch.
2. Use the throttle levers on the remote control to make the vehicle move forwards, backwards, left or right.
3. Switch off the vehicle and remote control after use.

Battery safety information


1. The batteries must only be charged under adult supervision.
2. Before charging the batteries, remove the battery compartment from the vehicle chassis.
3. Remove empty batteries from the vehicle and remote control.
4. Ensure that the vehicle is switched off before inserting the batteries.
5. Ensure that the batteries are inserted in the correct polarity (observe the + and - markings on the battery compartment).
6. Do not attempt to charge non-rechargeable batteries.
7. Do not short circuit the battery terminals.
8. If you do not plan to use the vehicle for an extended period, remove the batteries from the vehicle and remote control to prevent leakage.
9. Do not throw batteries into open flames, as this may cause them to explode or leak.
10. Different types of batteries or new and used batteries are not to be mixed.
11. Only use batteries from recommended or reputable manufacturers.
12. Regularly inspect the batteries for signs of leakage.
13. Keep this instruction manual in a safe place for future reference. It contains important information on how to use the product safely.
14. The battery charger used with the electric toy shall be regularly examined for damage to the supply cord, plug, enclosure or other parts, and in the event of damage, it shall not be used until the damage has been repaired.

Care and maintenance

1. Remove the batteries when you do not plan to use the toy for an extended period.
2. Use a damp cloth to wipe the vehicle clean.
3. Do not expose the toy to high temperatures, moisture or direct sunlight.
4. Do not immerse the toy in water, as this may damage the electrical components.

Caution

Do not touch the wheels when the vehicle is moving, as this may damage the vehicle.

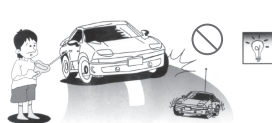

Do not use the vehicle next to roads or other hazards, as this may cause an accident.



Do not use the vehicle in puddles, mud or sand.

Hereby, (GUANGDONG SYMA MODEL AIRCRAFT INDUSTRIAL CO., LTD) , declares that this (Vehicle) is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

The full test of the EU declaration of conformity is available at the following internet address:

<http://www.symatoys.com/down/declaration-of-conformity.html>

SIMPLIFIED EU DECLARATION OF CONFORMITY

Manufacturer:

Guangdong Syma Model Aircraft Industrial Co., Ltd.

Address: No 2 West Xingye Road, intersection of North Xingye Road,
Laimei Industrial Park, Chenghai District, Shantou City, Guangdong
Province, China. Postal Code: 515800

Sales department: +86 0754 86980668 After-sales service: +86 0754 86395095

Fax: +86 0754 86395098

Website: www.symatoys.com

Email: syma@symatoys.com

The company has the right of final interpretation of this user manual.